

FUSE No.	DESCRIPTION ON THE FUSE COVER (& AMPERAGE)	PARTS UNDER THE FUSE
⑦	FI (15A)	• MAIN RELAY
⑧	DOME (20A)	• TCM • INTERIOR LIGHT • TRUNK ROOM LIGHT • RADIO • OPEN CONN. (KEYLESS CONT) • CLOCK • ECM
⑨	H/LP.LH (15A)	• HEAD LIGHT (LH)
⑩	H/LP.RH (15A)	• COMBINATION MTR (HIGH BEAM) • HEAD LIGHT (RH)
⑪	HORN (15A)	• DATA LINK CONN. • HORN RELAY • HAZARD SW.
⑫	TAIL.LH (10A)	• CLEARANCE, TAIL, FR SIDE MARKER LIGHT LH • RR SIDE MARKER LIGHT LH & RH
⑬	TAIL.RH (10A)	• CLEARANCE, TAIL, FR SIDE MARKER LIGHT RH
⑭	SMALL (10A)	• ECM • SHIFT SOLENOID • RR WIPER SW. • ILLUMINATION CONT. • COMBI MTR (ILL) • LICENSE LIGHT • HAZARD SW. • A/C SW. • RADIO • WARNING BUZZER • ASH TRAY ILL • CRUISE MAIN SW. • CLOCK
⑮	A/C (15A)	• A/C MAGNET CLUTCH RELAY • A/C CONDENSER FAN MOTOR RELAY
⑰	BACK (15A)	• TRANSMISSION RANGE SW. • HAZARD SW. • BACK UP LIGHT SW. • A/C AMPLIFIER • A/C SW. • MODE ACTUATOR
⑱	DEF (15A)	• RR DEFOGGER SW. • HEATER RELAY • A/C MAGNET CLUTCH RELAY • A/C CONDENSER FAN MOTOR RELAY
⑳	IG (20A)	• GENERATOR • RADIATOR FAN CONT. RELAY • HEATED OXYGEN SENSOR • IGNITION COIL • TCM • COMBINATION MTR • DRL CONT. • ABS CONT. • ABS FAIL SAFETY RELAY • CRUISE MAIN SW. • ECM • FUEL PUMP RELAY
㉑	STOP (20A)	• BRAKE LIGHT SW. • IGNITION SW. (KEY REMINDER SW)
㉒	FOG (15A)	• FOG LIGHT (OPTION)
㉓	ACC (20A)	• RADIO • CIGAR LIGHTER • POWER MIRROR SW. • CLOCK
㉔	DOOR LOCK (15A)	• POWER DOOR LOCK CONT.
㉕	WIP (15A)	• FR WIPER MOTOR • COMBINATION SW. (FR WIPER SW) • RR WIPER MOTOR • RR WIPER SW. • OPEN CONN. (KEYLESS CONT)
㉖	SUN ROOF (25A)	• SLIDING ROOF CONT
㉗	SSCS (15A)	• SUSPENSION CONTROL SYSTEM
㉘	AIR BAG (15A)	• AIR BAG CONT.
㉙	POWER WINDOW (30A)	• POWER WINDOW SW.
㉚	(CASSETTE FUSE) (25A)	• HEATER RELAY