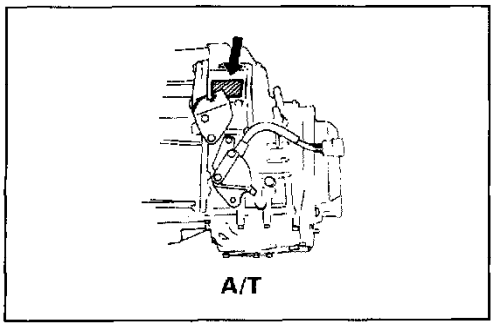

The number is located on the transmission case.

99 D □ □ 0001 —— **(A/T)**

- 0001 — Sequential Number
- D — Assembly Month (A ~ H, J ~ M)
- 99 — Assembly Year

Transmission Identification Number